


Parts List for H.MH-140 Brushless Micromotor Handpiece

Applies to Serial Nos. 211119001 and After

Spindle Assembly Complete
Part No. HP6-992A

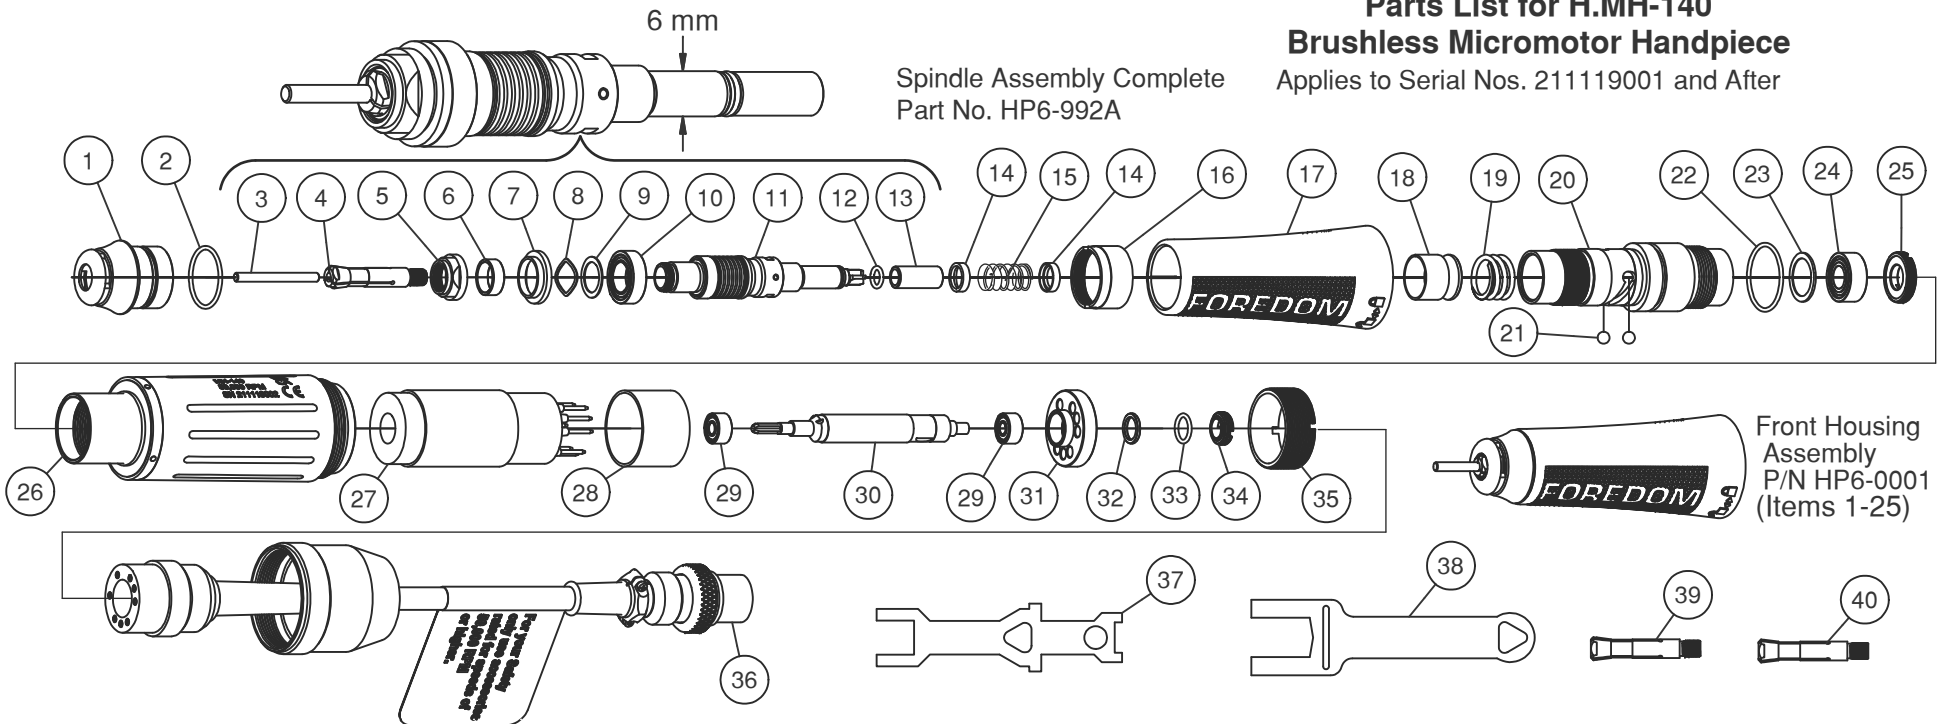

| Item | Part No. | Description | Qty |
|------|----------|---------------------------------|-----|
| 1 | | NOSE CONE, MICROMOTOR HANDPIECE | 1 |
| 2 | | O-RING, NOSE CONE | 1 |
| 3 | | BUR, BLANK | 1 |
| 4 | HP6-117 | COLLET, Ø2.35 mm | 1 |
| 5 | | NUT, BEARING RETAINER | 1 |
| 6 | | BRASS SPACER, BEARING | 1 |
| 7 | | BRASS SHIELD, BEARING | 1 |
| 8 | HP6-103 | WAVY WASHER | 1 |
| 9 | | FLAT WASHER | 1 |
| 10 | HP6-202 | BALL BEARING, 1480ZZ | 1 |
| 11 | | SPINDLE ASSEMBLY | 1 |
| 12 | | O-RING, SPINDLE | 1 |
| 13 | HP6-123 | DRIVE CONNECTOR | 1 |
| 14 | HP6-026A | BRASS CAP, BEARING PRELOAD | 2 |
| 15 | HP6-025A | SPRING BEARING, PRELOAD | 1 |
| 16 | | THREADED RING, FRONT HOUSING | 1 |
| 17 | HP6-0002 | FRONT HOUSING | 1 |
| 18 | | PLUNGER | 1 |
| 19 | | SPRING, PLUNGER | 1 |
| 20 | HP6-028A | SPINDLE HOUSING | 1 |
| 21 | HP6-029 | BALL, Ø.125 Inch | 2 |
| 22 | | O-RING, SPINDLE HOUSING | 1 |

| Item | Part No. | Description | Qty |
|------|----------|---|-----|
| 23 | | WASHER, BEARING THRUST | 1 |
| 24 | HP6-203A | BALL BEARING 1360ZZ | 1 |
| 25 | | THREADED LOCKING RING, REAR SPINDLE BEARING | 1 |
| 26 | | MICROMOTOR CASE | 1 |
| 27 | HP6-400 | STATOR ASSEMBLY | 1 |
| 28 | | STATOR SPACER | 1 |
| 29 | HP6-204 | BALL BEARING, 830ZZ | 2 |
| 30 | | PERMANENT MAGNET ROTOR | 1 |
| 31 | | REAR BEARING HOLDER | 1 |
| 32 | | BRASS SPACER, REAR BEARING | 1 |
| 33 | | O-RING, REAR BEARING | 1 |
| 34 | | REAR BEARING RETAINER | 1 |
| 35 | | THREADED RETAINER RING, STATOR | 1 |
| 36 | HP6-474 | CORDSET ASSEMBLY | 1 |
| 37 | HP6-993 | COLLET WRENCH | 1 |
| 38 | HP6-994 | NOSECONE WRENCH | 1 |
| 39 | HP6-117B | COLLET, Ø1/8 INCH | 1 |
| 40 | HP6-117C | COLLET, Ø3 mm | 1 |

FOREDOM® Freedom Electric Company
16 Stony Hill Rd., Bethel, CT 06801 • 203-792-8622
Fax: 203-796-7861 • www.foredom.net